


- 1. RubberBond FleeceBack EPDM
- 2. RubberBond Decking Adhesive
- 3. RubberBond Bonding Adhesive
- 4. Suitable thermal insulation, thickness determined by U-value
- 5. Vapour Control Layer (VCL)
- 6. Structural decking
- 7. Treated timber by others

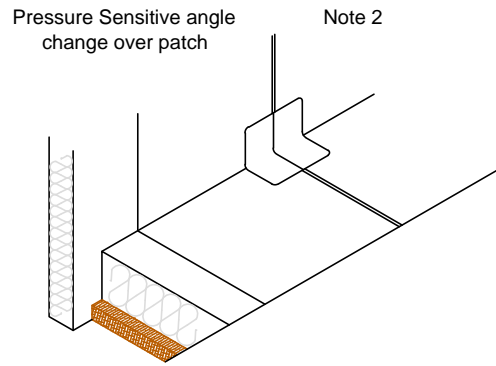

Notes:  
 1. This detail was prepared to serve as a guideline representing typical detailing conditions and illustrate the correct application of RubberBond products only. It may be necessary to modify this detail in whole or part in accordance with specific project conditions, design or requirements.  
 2. If 75mm field seam turns up through angle change install Pressure Sensitive cover patch using 225mm Uncured EPDM tape.  
 3. Dependant on width of the bottom of box gutter, the Bonding Adhesive (3) can be carried along the base of the box gutter or use RubberBond Decking Adhesive



Roofing the world for 50 years  
 www.rubberbond.co.uk

Title BOX GUTTER	
Product RB-BG-1	

A	13.09.12	PRODUCTION Issue
Rev	Date	Comments

Drawn MFO	Checked DW	Approved DW	Scale 1: 4@A4	Date 13.09.12
Status PRODUCTION				
Drawing No: RB/BG/1				Rev: A